


SYNCHRONIZATION (PAIRING) OF A CONTROL UNIT AND A FINGERPRINT READER: BUTTON "3" - TWO SECONDS

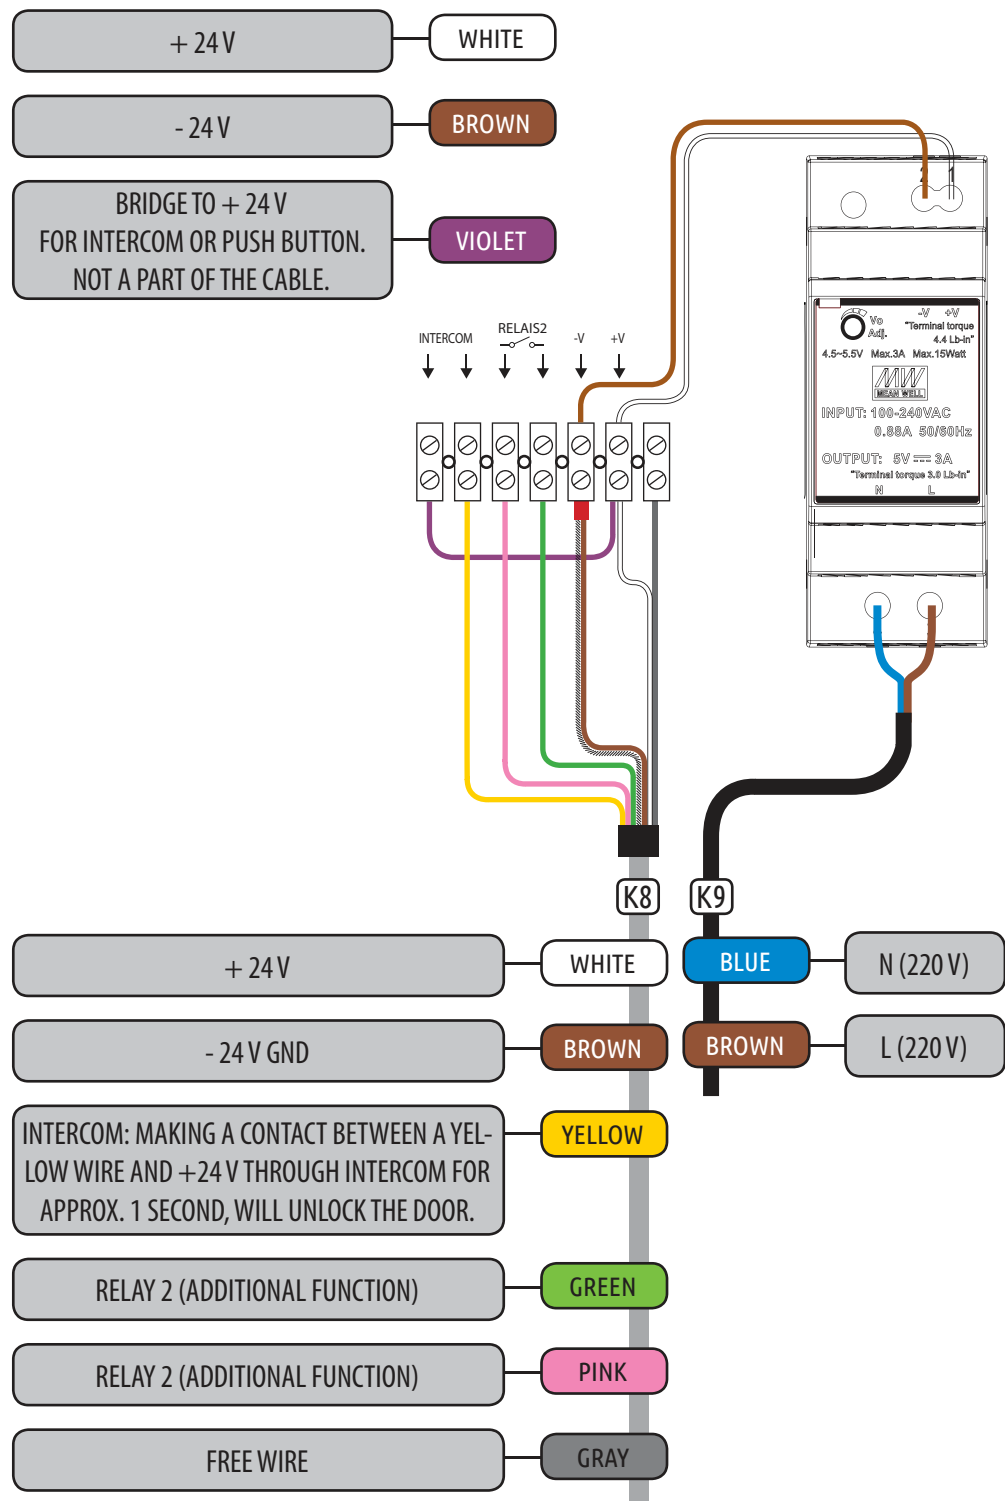

## INSTRUCTIONS TO CONNECT AND DISCONNECT THE POWER TRANSFER

### DISCONNECTING:

- THE BOLT THAT HOLDS THE CONNECTOR SHOULD BE UNSCREWED (PICTURE 1).
- A SMALL SREWDRIVER SHOULD BE INSERTED IN THE BOLT HOLE AND PULLED UPWARDS (PICTURE 2) WHILE HOLDING THE FEMALE PART OF THE CONNECTOR.
- DISCONNECTING MIGHT REQUIRE CONSIDERABLE FORCE. THERE IS A SILICONE SEAL INSIDE THE CONNECTOR, WHICH PRODUCES A LOT OF TRACTION.

**THE SPRING SHOULD NEVER BE PULLED. IT CAN GET DAMAGED!**

### CONNECTING:

- THE MALE CONNECTOR SHOULD BE FIRMLY INSERTED IN THE FEMALE PART.
- THE BOLT THAT HOLDS THE CONNECTOR SHOULD BE SCREWED BACK IN.

**THE BOLT SHOULD BE SCREWED MANUALLY!**

PICTURE 1



PICTURE 2

